



**ATD-5105**



### **INSTRUCTIONS FOR THE ATD-5105—Spark Plug Cleaner**

Use **SILICON CARBIDE** abrasive with the ATD-5105

It is recommended to use about **60g** of silicone carbide.

The **UP position** is for **AIR CLEANING** (if no sand is poured into the cleaner).  
The **Down position** is for **SAND BLASTING** (when sand is inside the cleaner).

The **AIR CFM PRESSURE** needed to run the ATD-5105 is **60 to 90 PSI**.

### **REPLACEMENT PARTS ARE:**

**ATD-5106—Replacement bag**

**ATD-5107—Silica for Spark Plug Cleaner**

**ATD-5108—Replacement Grommet**